

Voting Instructions for AccuVote-TS™

If you need assistance,
Please contact the
Chief Election Judge.

Voters requiring special
assistance and disabled voters. 
Maryland's new voting system
provides audio and magnified ballots.
Ask your election
judge about these
voting options.



Start: Insert Card



1

Insert voter access card into
slot at right of screen.
Card should be face up with
the arrow first.
Push card firmly until it clicks.


Read "Instructions to Voters"



2

Touch "Start"
to access ballot.

Select Candidates or Questions

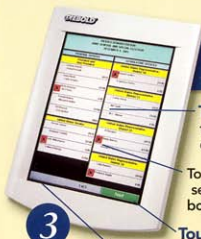

3

Touch the box next
to the candidate or
question of your choice.

To change or cancel your
selection, touch the
box again.

Touch "Next" to
advance the ballot page.

Touch "Previous" to go back.

Review & Cast Ballot



4

On Summary Page,
review your choices.

To go back,
Touch a race or
Touch "Review Ballot".

Touch "Cast Ballot"
when ready to record
your vote.

*Once your ballot is "cast"
you may not vote again*

Finish: Remove Card



5

Remove the
voter access
card and return
it to the
election judge.

Maryland **VOTES**
In Touch With The Future



Diebold

Powered By Diebold Election Systems